



Washing Machine Error Codes Quick Guide

Error Code	Cause	Solution
dET	Detergent cartridge is missing	Remove and reseal the detergent cartridge
Int	Washing cycle interrupted	This error message displays until the washer is safe to open.
rL	Clean washer cycle cannot complete	Remove items from washer and restart Clean Washer Cycle
F34	Clean washer cycle cannot complete	Remove items from washer and restart Clean Washer Cycle
Sud Sd	Too many suds	Only use High Efficiency detergent Only use regular bleach
F5 E2 LdL	Washer door or lid can't lock	Clear the error around the door or lid to remove obstructions. Check the locking mechanism for build-up and clean if necessary.
F7 E1	Motor can't reach optimal speed	<ul style="list-style-type: none">- Remove shipping bolts if present- Remove heavy items from washer
LdU	Washer lid can't unlock	Unplug washer for 60 seconds and replug. Check online troubleshooting guide for more info.
F8 E1 LQ FL	Machine not getting enough water	Verify water is active to the residence and the water inlet valves are open fully. Check the water inlet hose for kinks or clogs.
F8 E2	Problem with detergent dispenser	Check detergent drawer and cartridge for dirt, debris, or clogs. Clean if necessary.
F9 E1 drn	Washer not draining properly	Check drain hose for clogs and proper installation.
HC	Inlet hoses connected incorrectly	Disconnect the water inlet hoses and reconnect them to the opposite water valve.
OL	Washer Overloaded.	Remove excess items from washer.



Same-Day Appliance Repair

404-407-0071

